

- STAR RNAV from UIR/FIR
- STAR RNAV from UIR
- STAR RNAV from FIR
- ▲ IAF

IAF
E F100 A50
W F110 F70

F=FL / A=Alt
 W=West / E=East
 ITALIC : PROPS

APP	
08L 08R <u>09L</u> 09R	7E 7X ^{CDO}
<u>26L</u> 26R 27L 27R	7W 7X ^{CDO}


STAR ^{CDO}	
E	9X
W	9X

<u>01</u>	0A 0B
<u>02</u>	0C

STAR/APP
 0A JET/PROPS*
 0B PROPS
 *Props: only if no dedicated procedure is available

RUNWAY
01 PRIMARY RWY
 02 OPTIONAL RWY

URELO ———
 DCT WPT ON STAR

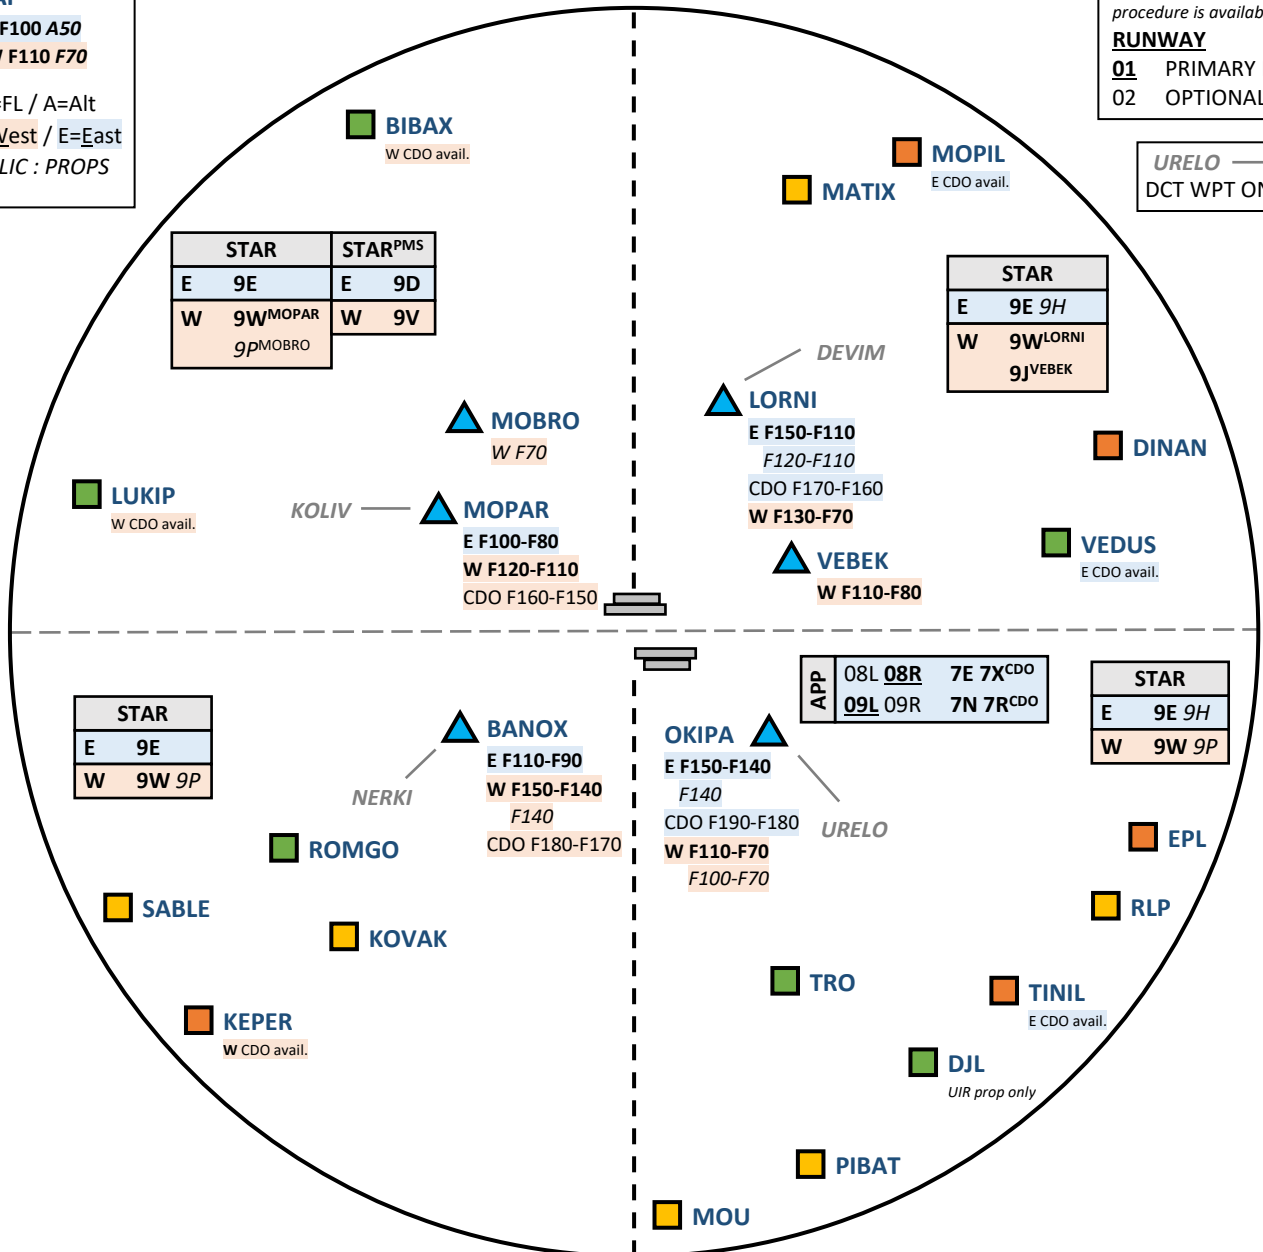

RWY	Proc.	Alt.	Remarks	RWY	Proc.	Alt.	Remarks
08L	ILS	5000ft	Alt. 4000ft/3000ft/2000ft available	26L	ILS	4000ft	IF→IG26L, alt. 3000ft/2000ft available
	RNP	5000ft	IF→PG410		RNP	4000ft	IF→PG441
08R	ILS	5000ft	IF→IG08R Alt. 4000ft/3000ft/2000ft available	26R	ILS	4000ft	Alt. 3000ft/2000ft available
	RNP	5000ft	IF→PG420		RNP	4000ft	IF→PG435
09L	ILS	4000ft	IF→IG09L, alt. 3000ft/2000ft available	27L	ILS	5000ft	Alt. 4000ft/3000ft/2000ft available
	RNP	4000ft	IF→PG670		RNP	5000ft	IF→PG660
09R	ILS	4000ft	Alt. 3000ft/2000ft available	27R	ILS	5000ft	IF→IG27R Alt. 4000ft/3000ft/2000ft available
	RNP	4000ft	IF→PG680		RNP	5000ft	IF→PG650